


SF-884 software installation


1. Install the software in PC

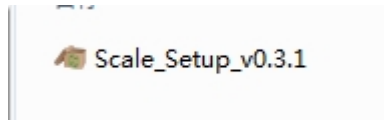


2. Open the software




3. Press 'Open' button and start to weigh items

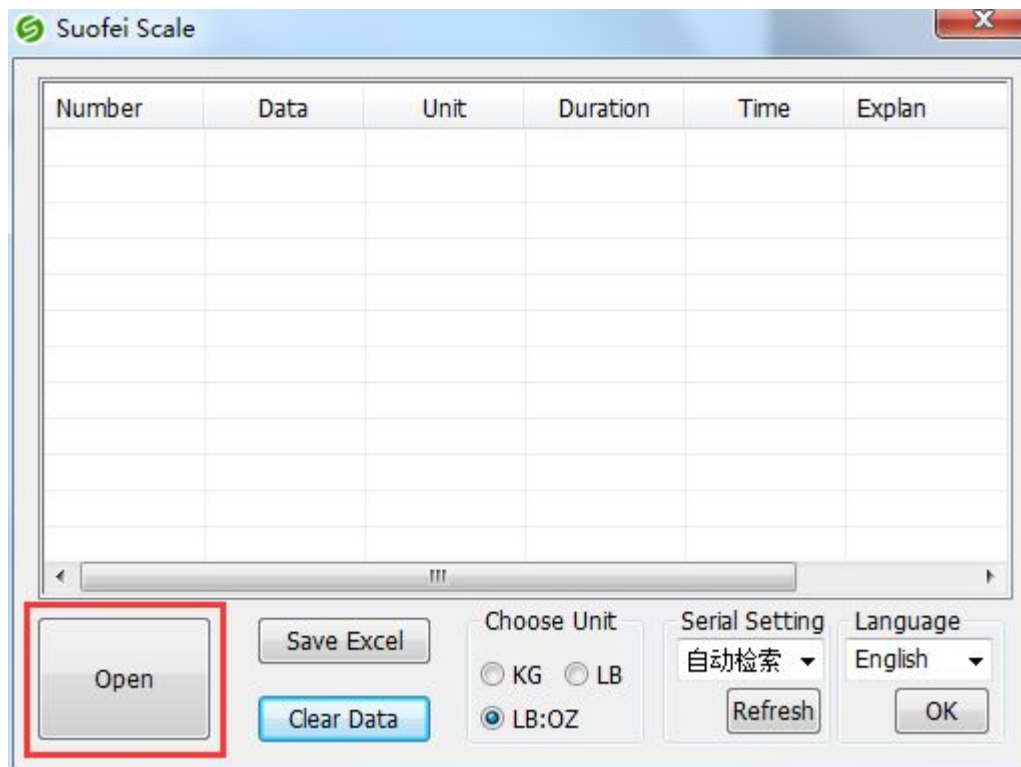

4. software will show weight data as below:

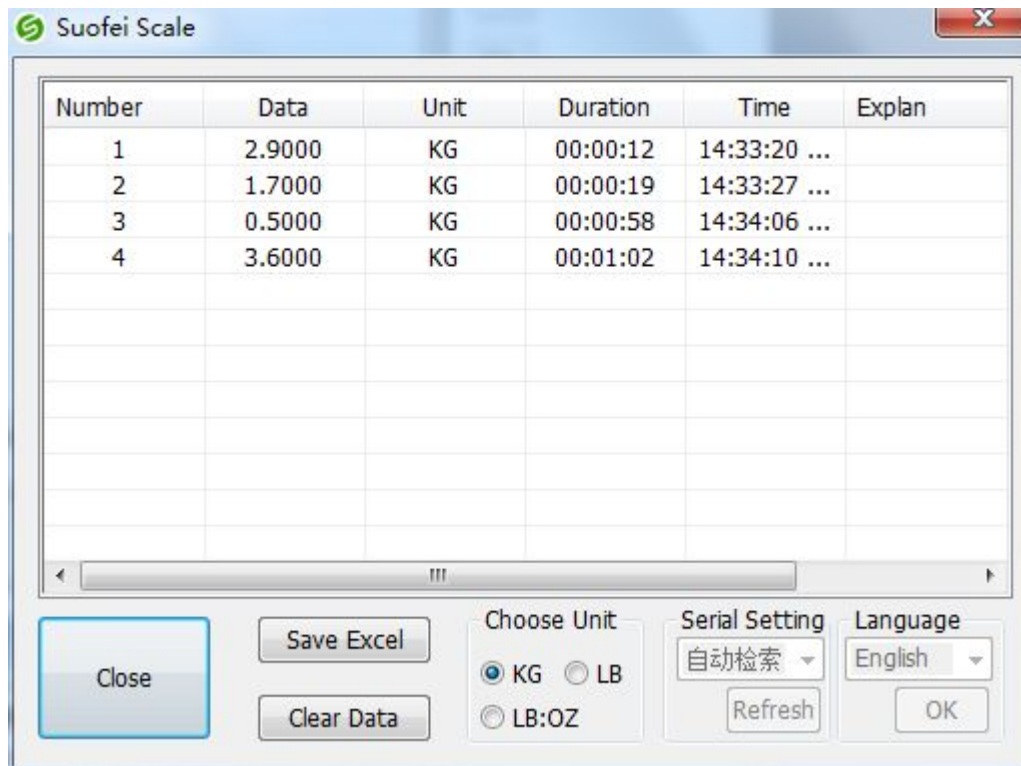


5. Click 'Save Excel' to save data

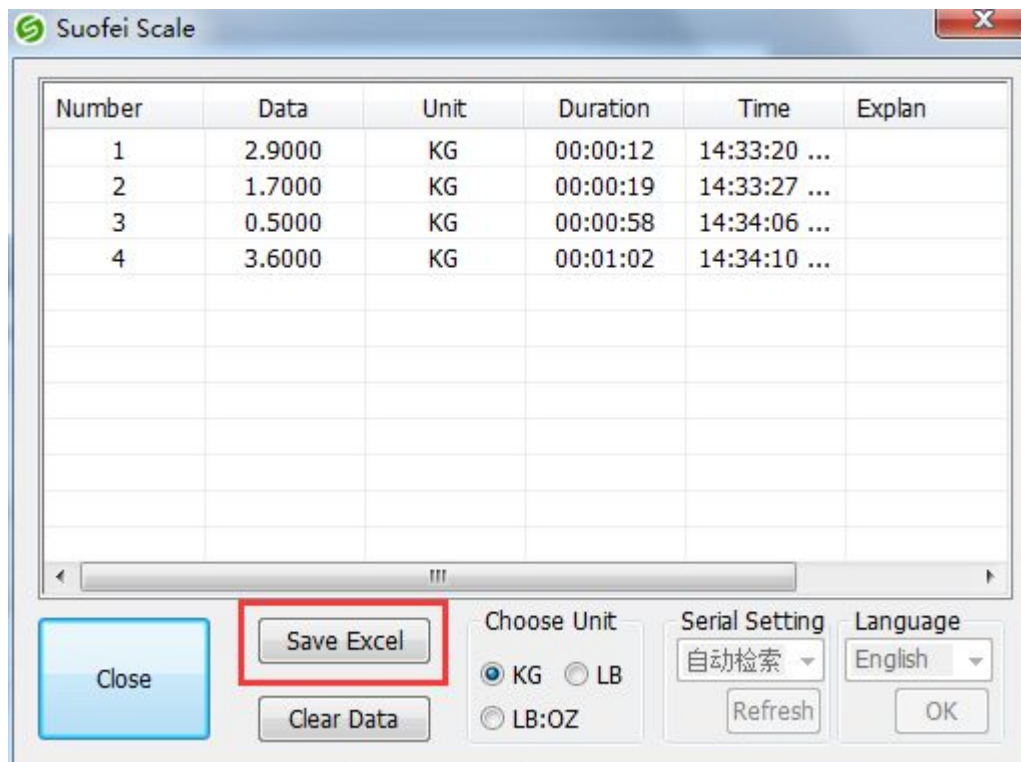


6. Please name your EXCEL

sheet

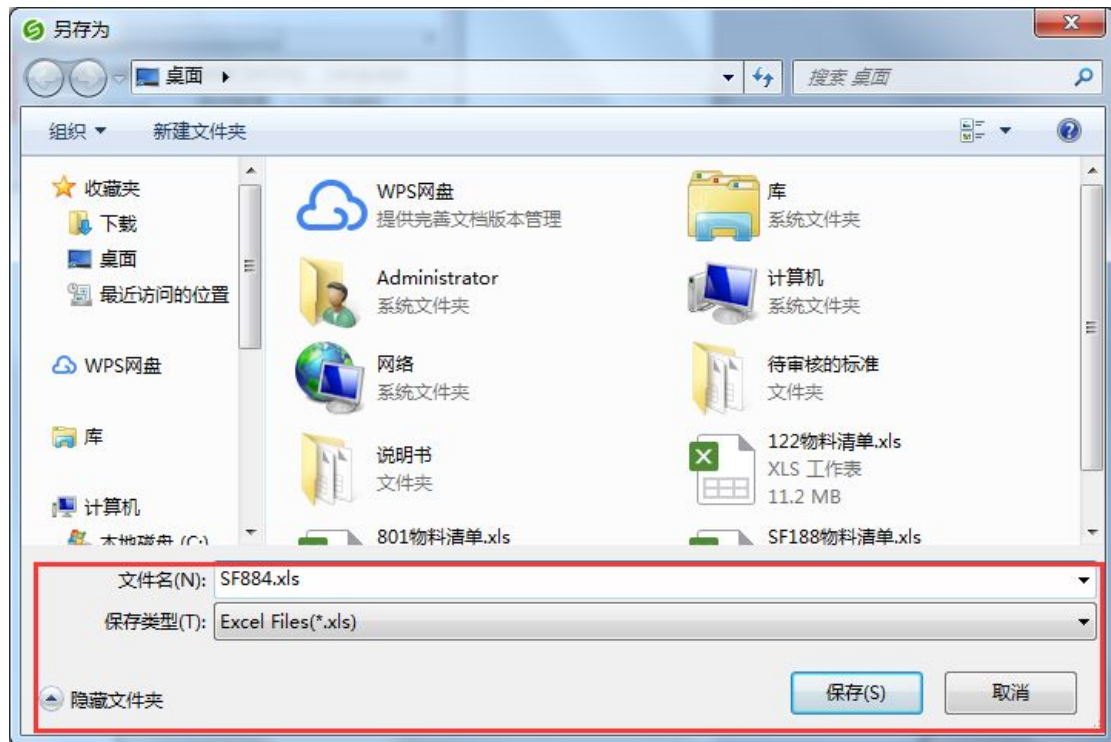


7. Double click the EXCEL sheet

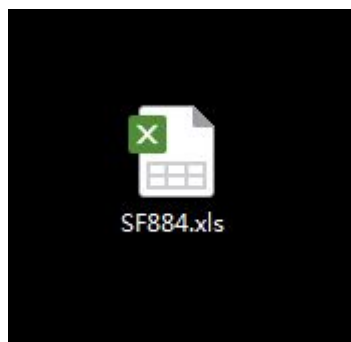


检测轮次	采集数值	数据单位	检测时长	更新时间	说明/备注
1	1.3224	LB	00:00:12	10:38:59 11/20/2018	
2	220.40	LB	00:01:22	10:40:09 11/20/2018	
3	110.42	LB	00:01:33	10:40:20 11/20/2018	
4	220.62	LB	00:01:41	10:40:28 11/20/2018	
5	220.62	LB	00:01:48	10:40:35 11/20/2018	
6	超重	KG	00:01:52	10:40:39 11/20/2018	
7	220.62	LB	00:01:59	10:40:46 11/20/2018	
8	220.62	LB	00:06:04	10:44:51 11/20/2018	
9	220.62	LB	00:18:06	10:56:53 11/20/2018	
10	220.62	LB	00:18:07	10:56:54 11/20/2018	

8. Clear Data


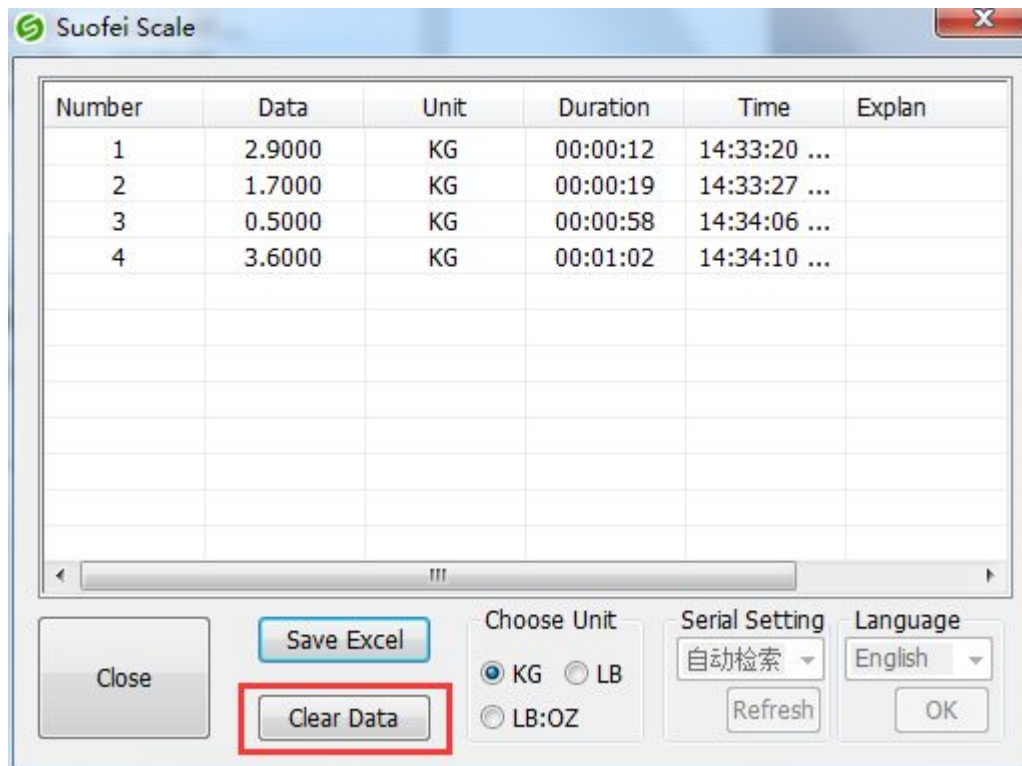



Click 'Clear Data' and it will show the following dialogue

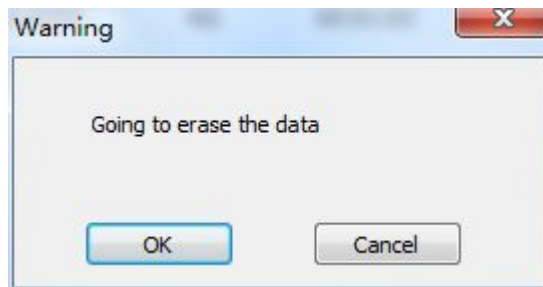


9. Choose Units

KG LB LB:OZ

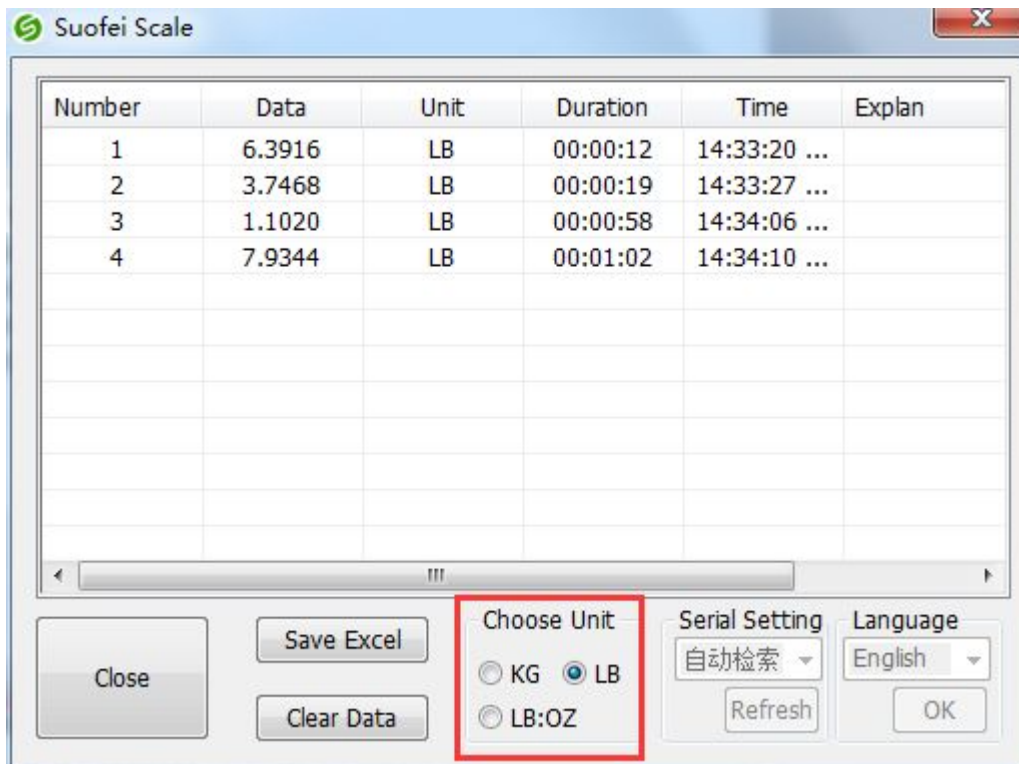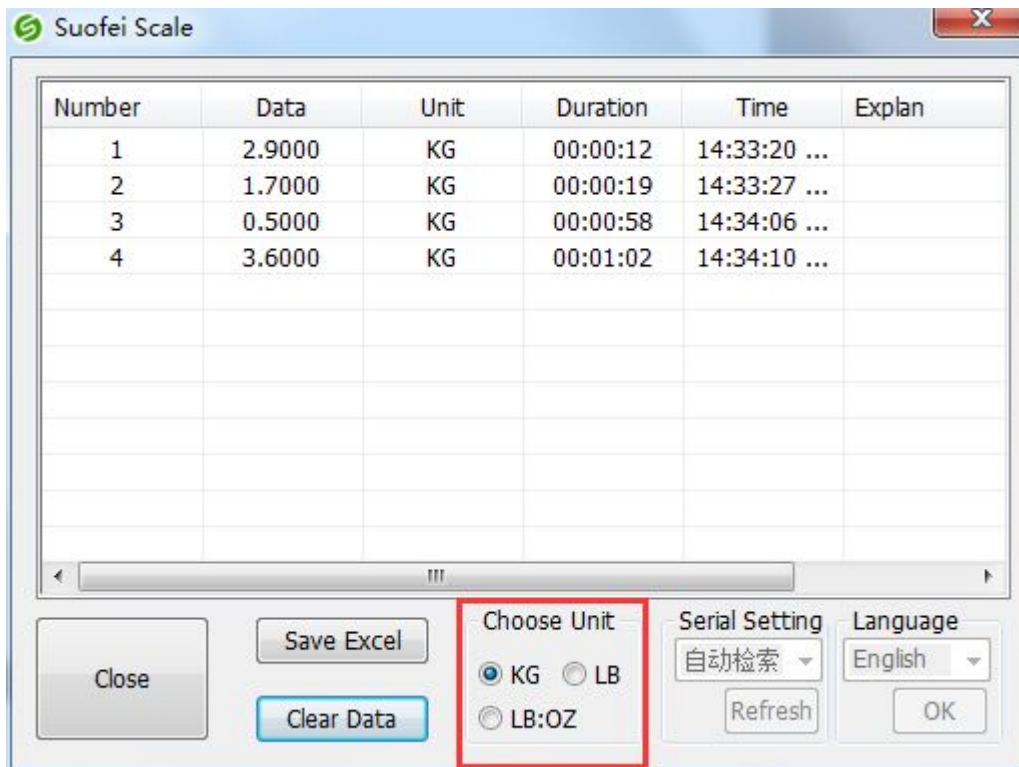

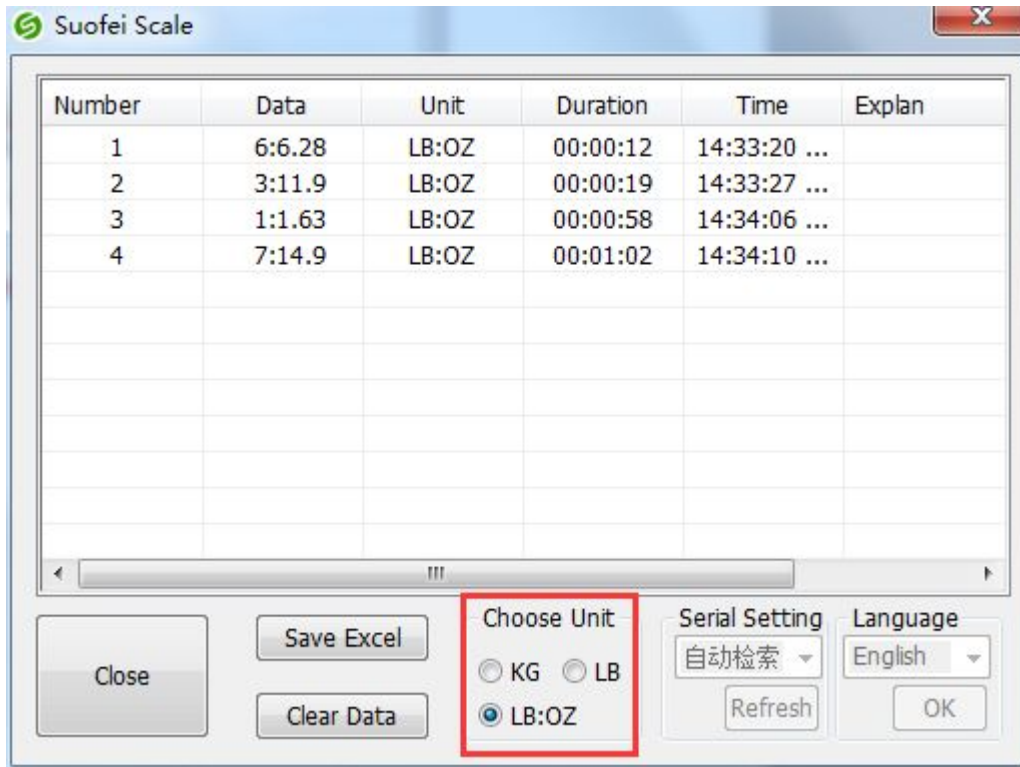

10. Choose language

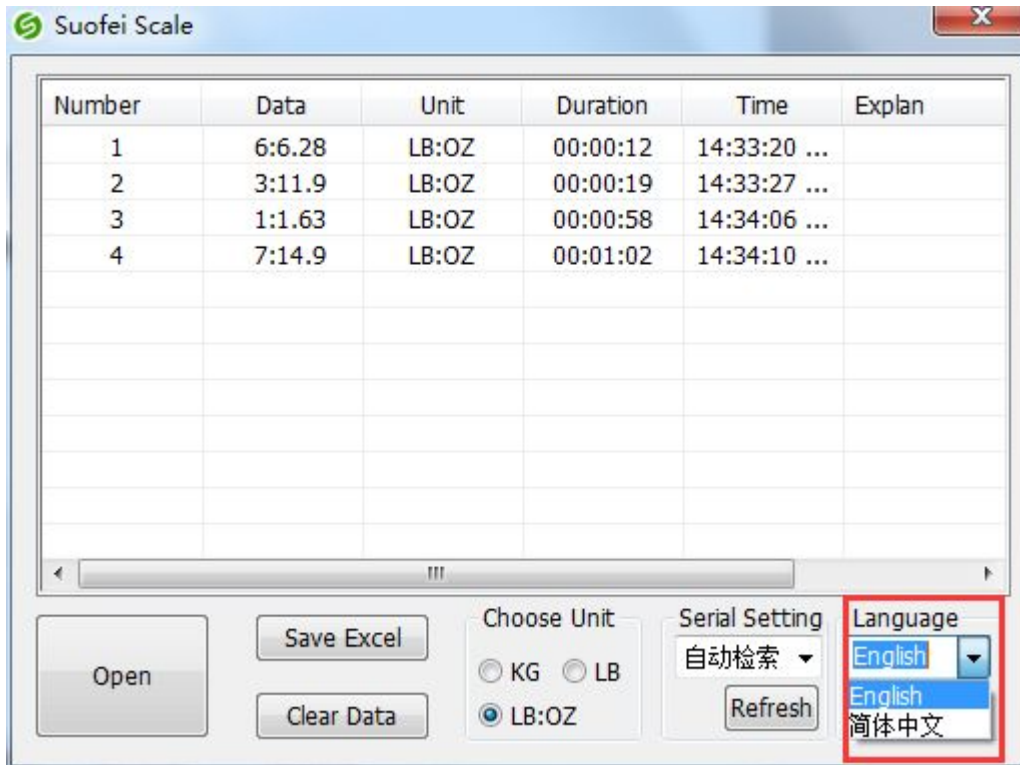

Click OK to confirm

